

LOGIK®

3 YEAR
GUARANTEE



MODEL: RSH-080462

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND UNDERSTAND
THE OPERATION OF THE APPLIANCE BEFORE USING IT.
RETAIN THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE.

1.7 litre **Glass Kettle**



GENERAL SAFETY INSTRUCTIONS:

1. Before using this Glass Kettle, please read the instructions carefully.
2. Please keep these instructions, the guarantee certificate, the sales receipt and, if possible, the gift box with the inner packaging for future reference.
3. The Glass Kettle is intended exclusively for domestic use only and not for commercial use!
4. Switch Off the Glass Kettle and remove the plug from the main electrical supply whenever the Glass Kettle is not in use, when attaching accessory parts, when cleaning the Glass Kettle or whenever a disturbance occurs.
5. Test the Glass Kettle and the cable regularly for damage. If there is damage of any kind, the Glass Kettle should not be used.
6. Repairs to the Glass Kettle should only be performed by a qualified technician.
7. Close supervision is necessary whenever the Glass Kettle is used by or near children.
8. Under no circumstances must the Glass Kettle be submerged in water or in any other liquids.
9. Do not use the Glass Kettle outdoors.
10. Do not use the Glass Kettle with damp or wet hands.
11. Use the Glass Kettle only for its intended purpose.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the Glass Kettle.

NOTE: The Glass Kettle should be used to boil water only; not any other liquids.

KNOW YOUR KETTLE:



- | | |
|--------------------------|-------------------------------------|
| A. Lid Lift | B. Lid |
| C. Handle | D. Glass Body |
| E. Water Level Indicator | F. Blue "ON" Indicator Illumination |
| G. On/Off Switch | H. 360 Degree Power Base |

Before First Use

NOTE: The Glass Kettle must only be used with the matching 360 Degree Power Base supplied.

- Remove all the packaging material.
- Place the 360 Degree Power Base on a dry level surface.
- It is recommended to wash the interior of the Glass Kettle before first use.

Using the Glass Kettle

1. The Glass Kettle must be in the "O" (off) position (switch up).
2. Do not use hot water to fill the Glass Kettle. Use only cold water.
3. Ensure that the water is filled to at least the Minimum level and does not exceed the Maximum level.
4. Place the Kettle onto the 360 Degree Power Base.
5. Ensure that the Lid is properly closed.
6. Connect the plug to the main electrical supply ensuring that the voltage and the frequency are the same as detailed on the Rating Plate found on the 360 Degree Power Base of the Glass Kettle.
7. To switch On, push the On/Off Switch to the "I" position (switch

- down). The Blue Indicator Light will illuminate.
8. When the water has boiled the Glass Kettle will switch Off. If required, the water can be boiled again by pressing the On/Off Switch to the "I" position (switch down).
 9. The Glass Kettle may be switched off at any time by pressing the On/Off switch to the "O" (off) position (switch up).

IMPORTANT:

10. Switch off the main electrical supply and remove the plug from the main electrical supply before removing or replacing the Glass Kettle from the 360 Degree Power Base or when the Glass Kettle is not in use.
11. This Glass Kettle is made from glass and could break if dropped. Take extra care when using the Glass Kettle.

DESCALING

It is recommended that the Glass Kettle be descaled regularly to prevent 'furring'.

- To descale, fill the Glass Kettle with 1 L of water and add 50 ml vinegar.
- Boil the water and allow to stand overnight. Re-boil the water the next day.
- Discard the re-boiled water and refill the Glass Kettle with fresh water.
- Boil the fresh water. This boiled water must also be discarded.

NOTE: Normal commercial descalers for kettles may also be used. Follow the instructions carefully for the given descaler.

CLEANING


- Remove the plug from the main electrical supply before cleaning.
- Do not immerse the Glass Kettle in water or any other liquid.
- Avoid the use of solvents, polish, and abrasive or aerosol cleaners as they may damage the surfaces of the Glass Kettle. Clean the exterior by wiping with a slightly dampened soft cloth.
- The interior of the Glass Kettle may be cleaned using a mild detergent. It must be thoroughly rinsed before re-use.
- The calcium filter can be removed for cleaning.

NOTE: Ensure that the Glass Kettle is thoroughly dried before reconnecting it to the main electrical supply.

STORAGE

When not in use, store the Glass Kettle in a dry, safe place out of the reach of children.

ENVIRONMENT FRIENDLY DISPOSAL:

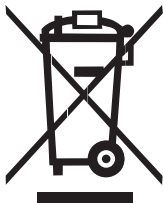

**You can help protect the environment!
Please remember to respect the local regulations:
Hand in the non-working electrical equipment to
an appropriate waste disposal centre.**

TYPE:	RSH-080462
RATED VOLTAGE:	AC 220-240 V
RATED FREQUENCY:	50/60 Hz
RATED POWER:	1850-2200 W

Packed for Game (MASSTORES (PTY) LTD)
16 Fredman Drive, Sandton, South Africa, 2196
MADE IN CHINA
Game Customer Care Line: 0861 GAMECARE (42632273)

19/03/#G5645LD